

MONTAGEANLEITUNG

 MONTAGEANLEITUNG
 ASSEMBLY INSTRUCTION
 DE INSTRUCTIE VAN DE ASSEMBLAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUCCIÓN ENSAMBLAJE
 INSTRUCTION DE MONTAGE
 NÁVOD K MONTÁŽI
 MONTERINGSANVISNING

 MONTAJ TALIMATI
 ASENNUSOHJE
 BRUGSANVISNING
 BRUKSANVISNING
 UPUTE ZA MONTAŽU
 NAVODILA ZA MONTAŽO
 SZERELÉSI ÚTMUTATÓ
 INSTRUCTIUNI DE MONTAJ



Version 16.6

Modell-Nr.

12130

ART.-NR.

FRONT

KORPUS

12131

Dunkelrot
NCS S 1580-R

Hellgrau
PANTONE Cool Gray 11 C

12133

Dunkelblau
PANTONE 2379 C

Hellgrau
PANTONE Cool Gray 11 C

12134

Silber Metallic
NCS S 4005-B

Hellgrau
PANTONE Cool Gray 11 C

12138

Anthrazitgrau
RAL 7016

Hellgrau
PANTONE Cool Gray 11 C

12139

Schwarz Struktur
RAL 9005

Hellgrau
PANTONE Cool Gray 11 C

Friedrich Küpper GmbH
 Friedrich-Küpper-Weg
 54570 Berlingen
 Deutschland

Telefon +49 (0) 65 91 - 95 42 0
 Telefax +49 (0) 65 91 - 95 42 17
 E-Mail info@friedrich-kuepper.de
 Internet www.friedrich-kuepper.de

EINZELTEILE / PIECES

1× **A**



770,5 mm × 474,5 mm

Art.-Nr. E4088

1× **B**



770,5 mm × 475,5 mm

Art.-Nr. E4089

2× **C**



472,5 mm × 226,5 mm

Art.-Nr. E4090

1× **D**



475 mm × 174,5 mm

Art.-Nr. E4091

1× **E**



445 mm × 148 mm

Art.-Nr. E4092

1× **F**



445 mm × 148 mm

Art.-Nr. E4093

1× **G**



472 mm × 228 mm

Art.-Nr. E4094

1× **H**



402 mm × 170 mm

Art.-Nr. E8121 (Dunkelrot/darkred)

Art.-Nr. E8321 (Dunkelblau/darkblue)

Art.-Nr. E8421 (Silber metallic/silver metallic)

Art.-Nr. E8835 (Anthrazitgrau/anthracite grey)

Art.-Nr. E8967 (Schwarz Struktur/black)

1× **I**



133,5 mm × 170 mm

Art.-Nr. E8122 (Dunkelrot/darkred)

Art.-Nr. E8322 (Dunkelblau/darkblue)

Art.-Nr. E8422 (Silber metallic/silver metallic)

Art.-Nr. E8836 (Anthrazitgrau/anthracite grey)

Art.-Nr. E8968 (Schwarz Struktur/black)

2× **J**



Art.-Nr. E0247

BEUTELINHALT / BAG CONTENT



22×
M5 × 10 mm
Art.-Nr. E0299




24×
ø 5,3 mm
Art.-Nr. E1003



2×
M5 × 20 mm
Art.-Nr. E1051



4×
KU 4 × 16 mm
Art.-Nr. E0285

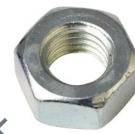

8×
M8
Art.-Nr. E0295




2×
5,5 × 19 mm
Art.-Nr. E0284



2×
Art.-Nr. E0296




4×
Art.-Nr. E0294

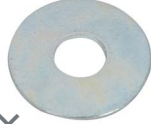

8×
ø 8,4 mm
Art.-Nr. E0780

BENÖTIGTES WERKZEUG / NEEDED TOOLS

1

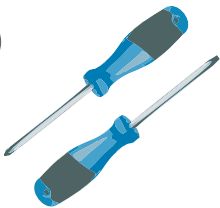

PH 1 × 100
PH 2 × 100

2




SW 7
SW 8
SW 13


1.  8× M8  8×8,4 MM  4×



2.

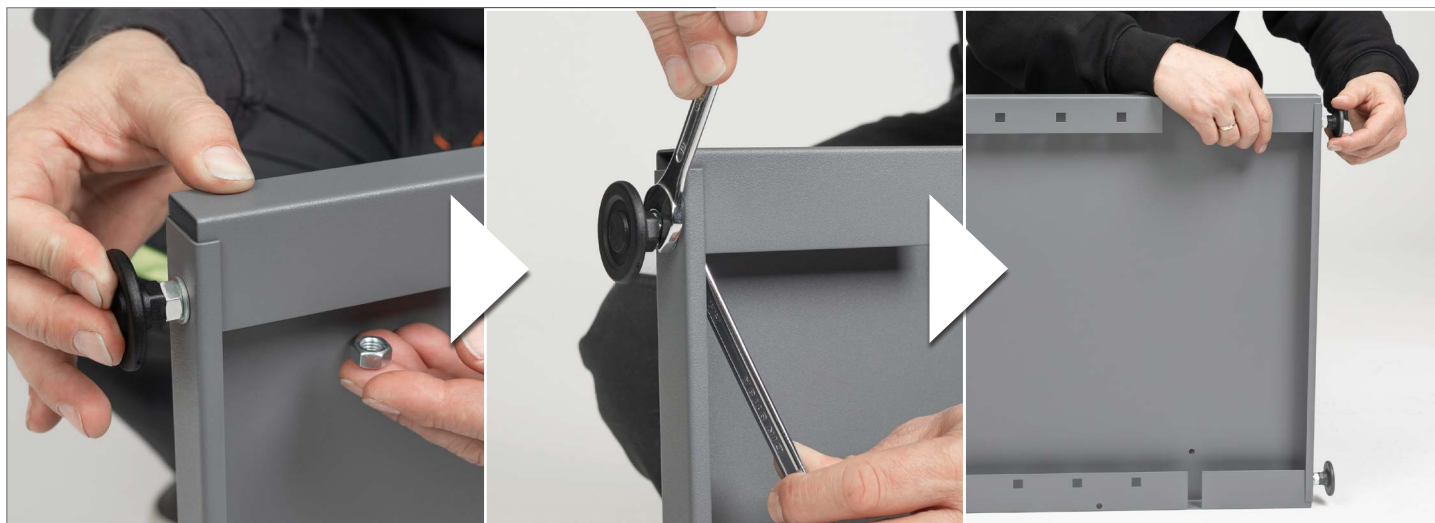

3.

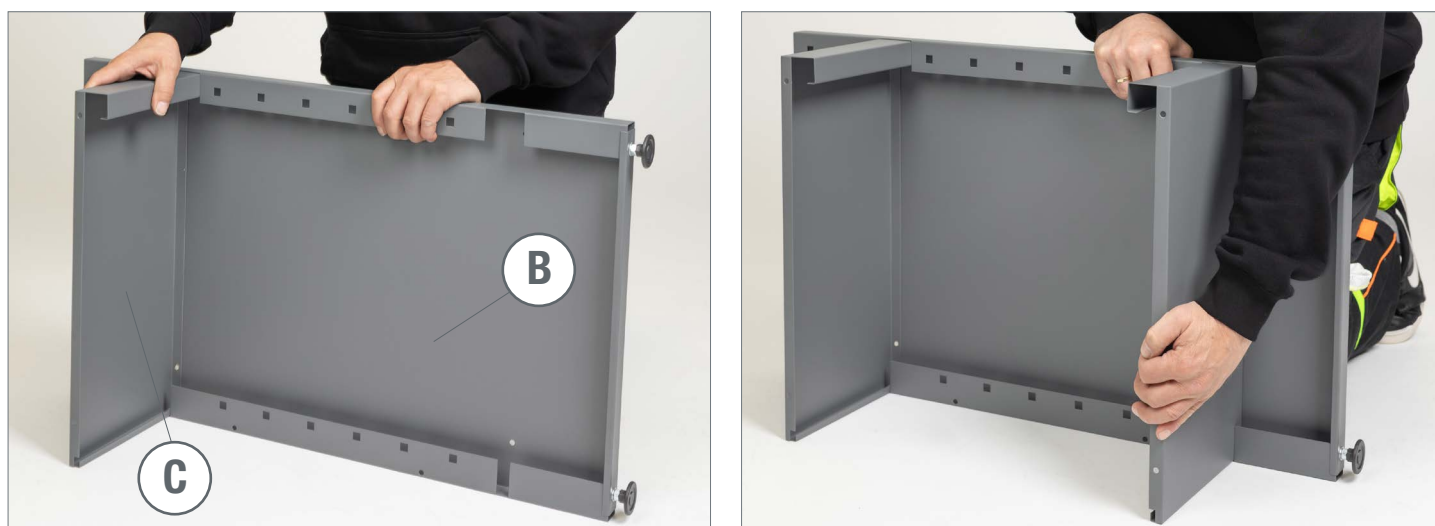

4.



5.

10x M5


10x M5 x 10

②  SW8

①  PH 2x100



6.

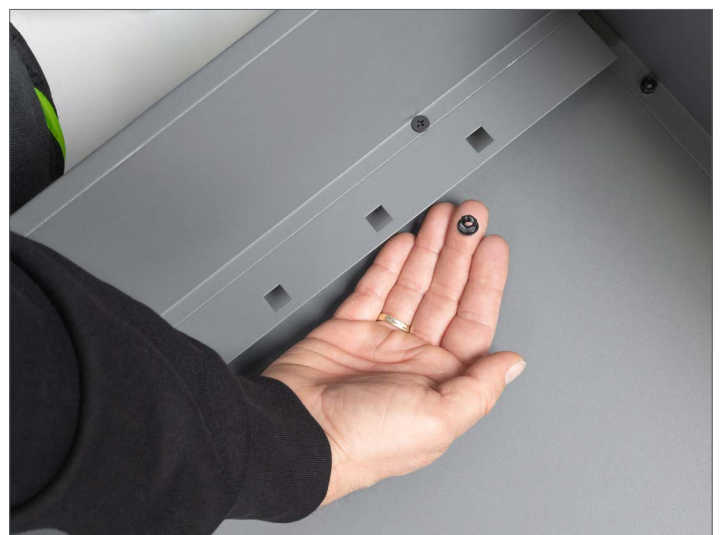


7.



8.




9.

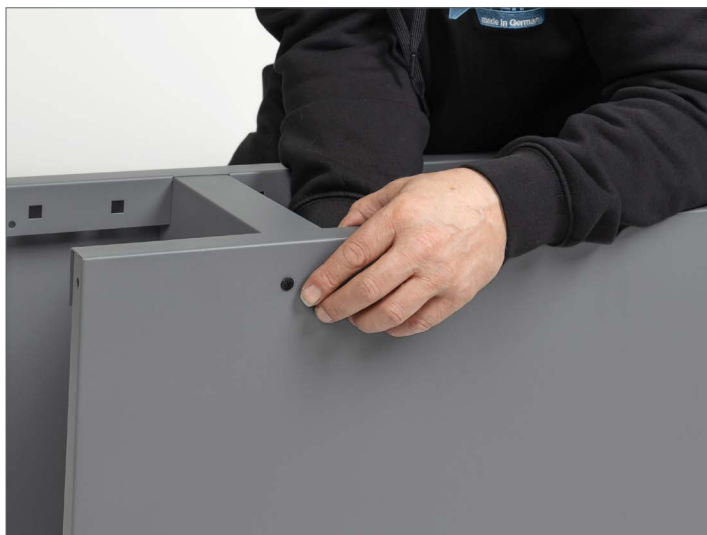

10.



11.

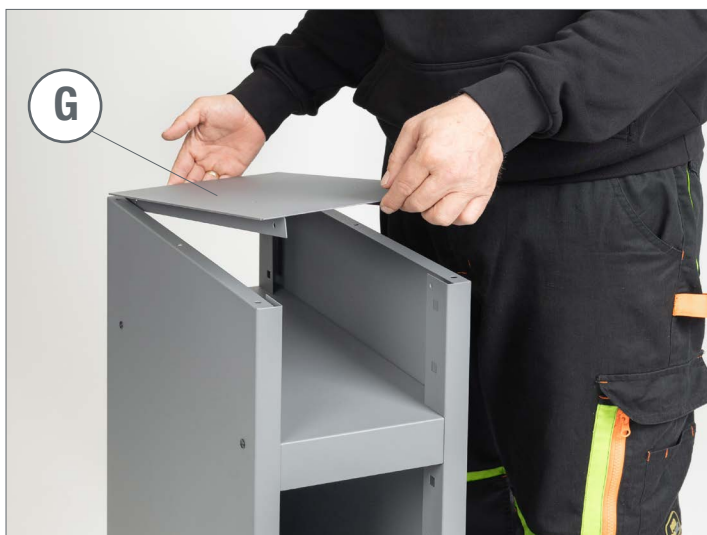

12.

4x M5 4x M5x10

② SW8 ① PH2 100



13.



14.

4x M5

4x M5 x 10

②  SW8

①  PH 2 x 100



15.



16. 2x M5 2x M5x 20 ② SW8 ① PH2 100



17. 2x KU 4x 16 1x ① PH2 100



18.



19. 4x M5 4x M5 x 10 ② SW8 ① PH2 x 100



20.




21. 2x KU 4x 16 1x

① PH2 x 100



22.

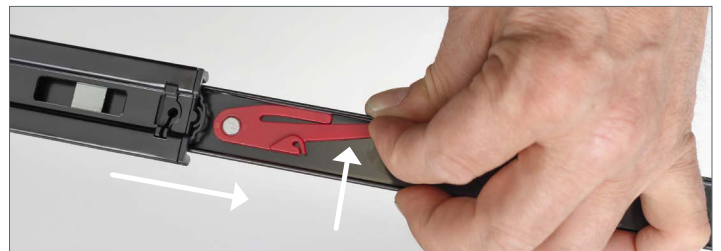


23.



24.



25.

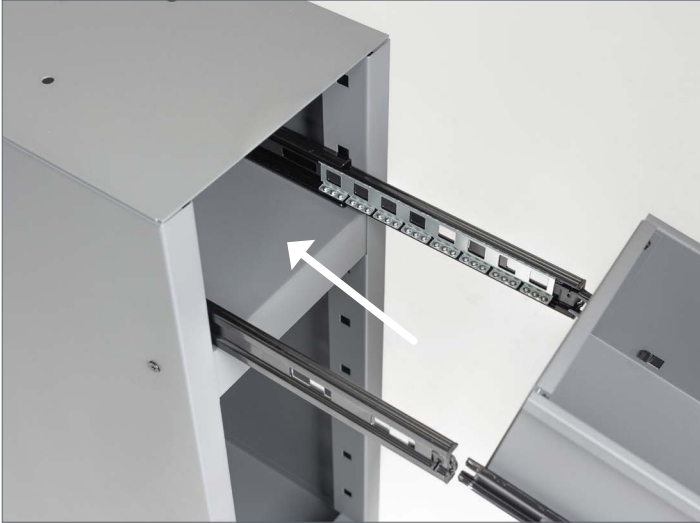


26.





Durch den Einbauschränk anschrauben!
fix it through the cabinet!

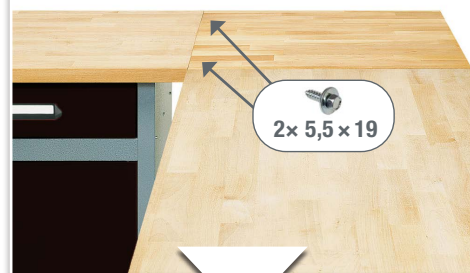

Modell-Nr.

12130