

Montageanleitung / Assembly instruction / Notice de montage Art. Nr. 1948 / 1949



Lieferumfang / contents / Contenu de la livraison




 Art.-Nr. E0376 4 x Art. 1948 18 x Art. 1949	 Art.-Nr. E0975 4,5 x 20 2 x Art. 1948 6 x Art. 1949	 Art.-Nr. E1483 M5 x 25 4 x Art. 1948 18 x Art. 1949	 Art.-Nr. E4110 80 x 50 mm 1 x Art. 1948 6 x Art. 1949	1xA  Art.-Nr. E4107 (1948) 38x18,5x4 cm (Li.) Art.-Nr. E4104 (1949) 60x18,5x4 cm (Li.)	1xB  Art.-Nr. E4108 (1948) 38x18,5x4 cm (Re.) Art.-Nr. E4105 (1949) 60x18,5x4 cm (Re.)	2xC  Art.-Nr. E4109 (1948) 38x18,5 cm Art.-Nr. E4106 (1949) 60x18,5 cm
 Art.-Nr. E0284 5,5 x 19 4 x Art. 1948 4 x Art. 1949	 Art.-Nr. E1003 M5 12 x Art. 1948 26 x Art. 1949	 Art.-Nr. E1484 4 x 10 8 x Art. 1948 8 x Art. 1949	 Art.-Nr. E0299 M5 x 10 8 x Art. 1948 8 x Art. 1949			



Bei 2,40 m breiten Werkstatt Kombinationen werden 2 Sets (Art. 1949) benötigt.
For 2.40 m wide workshop combinations, 2 sets (Item 1949) are required.
Pour les ensembles d'atelier de 2,40 m de large, il faut 2 kits (réf. 1949)


1.

2.  E0299 (4x) / E1003 (4x)

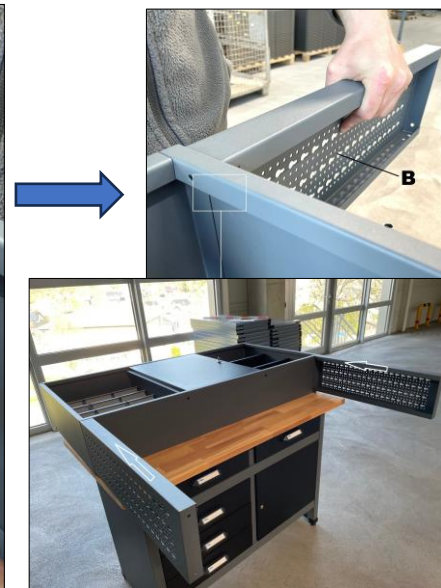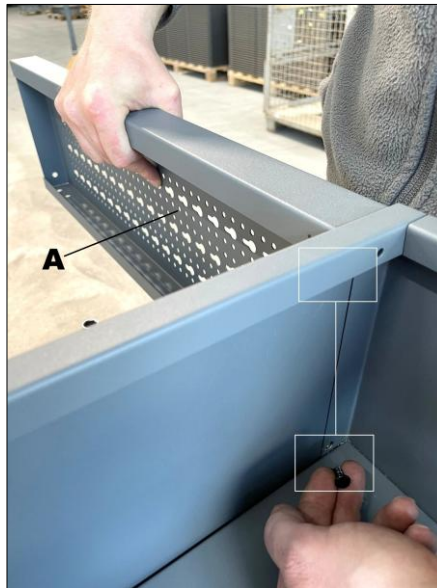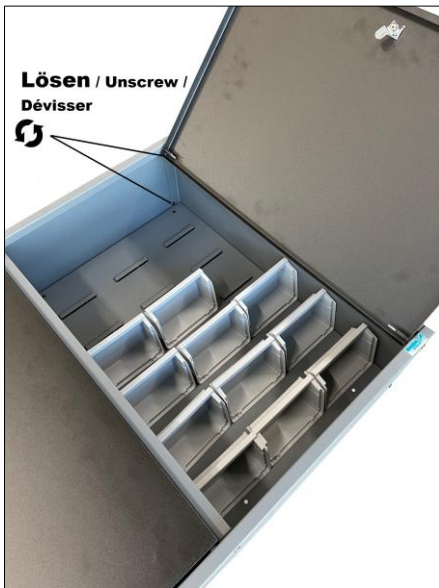


3.

4.  E0299 (4x) / E1003 (4x)

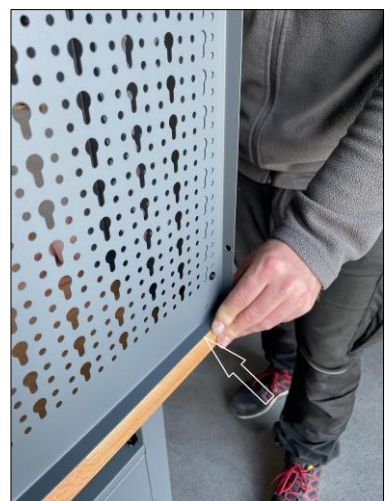


5. Anzeichnen / mark / marquer

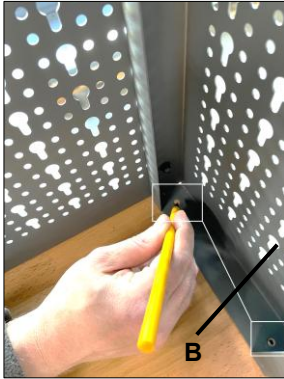

6. 4x bohren / drill / percer



7. E0284 (4x)

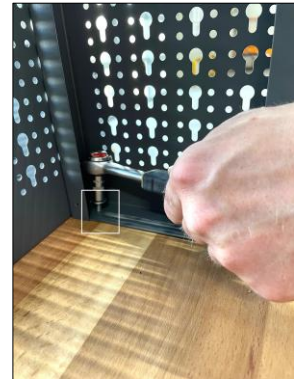


8.




9.

E1484 (8x)

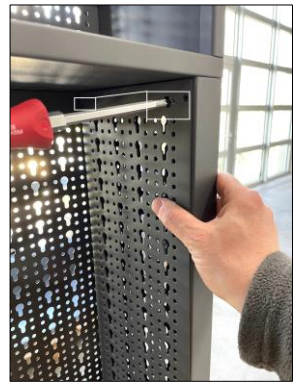

11. E0376 (4x/16x) / E1483 (4x/18x)

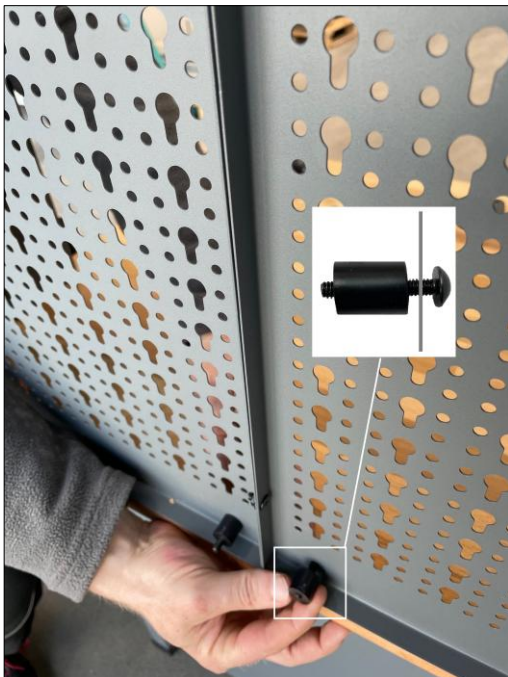

12. E1003 (18x) / E4110 (6x)

